




IMPORTANT! - PLEASE READ THIS BEFORE USE

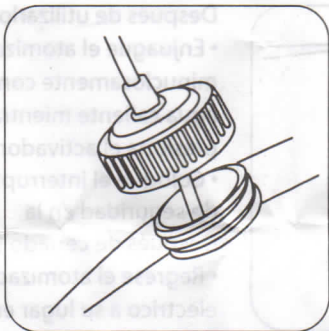

How to Attach Sprayer to Bottle : Remove Power Sprayer and hose from side carrier. Replace bottle cap with cap attached to Power Sprayer hose.

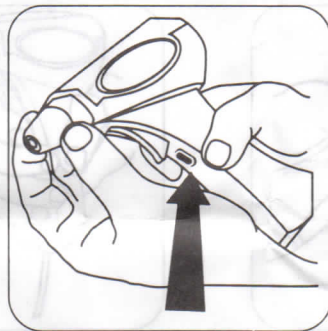

Prepare to Spray : Point Sprayer away from body. Adjust nozzle to desired setting. Do not turn past "X" position. Slide safety switch to ON position.

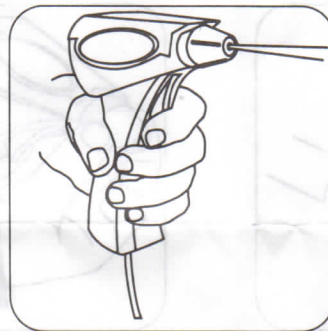

Spray : Squeeze trigger to dispense product. Sprayer may require several seconds to prime before spraying.

After Use:

- Flush sprayer thoroughly with warm water while pressing trigger.
- Slide safety switch to LOCK position.
- Return Power Sprayer to side carrier for storage.
- Replace bottle cap

4AA Batteries Included

Helpful Hints


- To be used with 30 SECONDS Outdoor Cleaner only.
- Keep the Sprayer Switch in LOCK position when storing or changing batteries.
- If the sprayer motor does not run, check batteries for correct polarity in the battery hatch inside the handle.
- If the sprayer motor runs but does not spray, twist nozzle to open, Lower the sprayer to the level of the fluid in tank to assist priming. Once primed, the sprayer should function normally.
- If the spray is inconsistent, the nozzle may be partially blocked. Remove the nozzle by twisting past the X marker. Flush with warm water and twist the nozzle back on to the sprayer.
- The sprayer is packaged with the batteries installed. For best results, remove the batteries, wipe dry and reinstall before use. Condensation may occur during shipment.
- Do not mix old batteries with new batteries. Do not mix Alkaline with Standard or rechargeable batteries.

Safety First


- **KEEP AWAY FROM CHILDREN.** This sprayer is not Child-resistant. Keep the Safety Lock in LOCK position when not in use.
- **Follow all Cautions and Directions on 30 SECONDS Outdoor Cleaner label.**
- **Never place the nozzle in your mouth.**
- **Don't spray towards people or pets.**
- **Don't spray towards electrical outlets or components.**

To install handle and pole, loosen collar, align slots with notches inside collar, insert handle to desired height and tighten collar clockwise.


IMPORTANTE! - POR FAVOR LEA ESTO ANTES DE UTILIZARLO

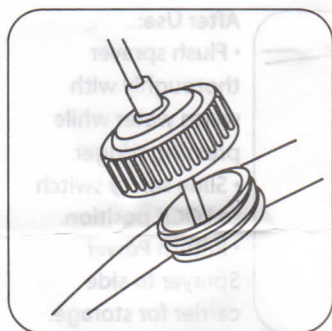

Como acoplar el atomizador a la botella: Retire el atomizador electrico y la manguera del portador. Reemplace la tapa de la botella con la tapa unida a la manguera del atomizadorelectrico.

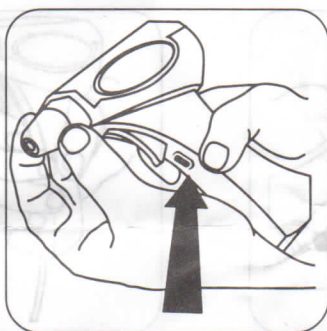

Prepárese a rociar: Coloque el atomizador lejos de su cuerpo. Ajuste la boquilla a la Después deseada. No la gire mas allá de la Después "X". Deslice el interruptor de seguridad a la Después de encendido (ON).

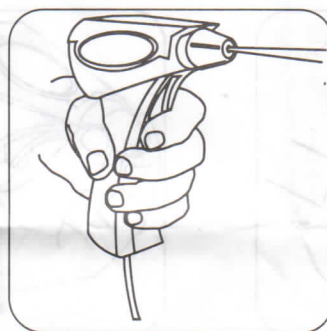

Después: Apriete el activador para dispensar el producto. El atomizador puede requerir varios segundos para cargarse antes de comenzar a rociar.

Después de utilizarlo:

- Enjuague el atomizador minuciosamente con agua caliente mientras presiona el activador.
- Coloque el interruptor de seguridad en la Después de cerrado (LOCK)
- Regrese el atomizador electrico a su lugar en el portador para guardarlo.
- Reemplace la tapa de la botella.

Se incluyen 4 baterías AA

Concejos útiles

- Para utilizar con el limpiador 30 SECONDS para exteriores solamente.
- Mantenga el interruptor de seguridad en la Después de cerrado (LOCK) cuando guarde o cambie las materias.
- Si el motor del atomizador no se acciona, revise las materias para verificar si están en la polaridad correcta en su contenedor ubicado en el mango.
- Si el rociado es inconsistente, la boquilla puede estar parcialmente bloqueada. Retire la boquilla girando mas allá de la marca X. Enjuague con agua caliente y enrosque la boquilla nuevamente en el atomizador.
- El atomizador es empacado con las materias instaladas. Para mejores resultados, retire las baterías, séquelas y reinstalelas antes de usar. Durante el envío puede haberse generado condensacion.
- No mezcle las materias viejas con las nuevas. No mezcle las materias alcalinas con las materias estandar o recargables.

Primero la Seguridad

- **MANTENGA FUERA DEL ALCANCE DE LOS NIÑOS.** Este atomizador no es seguro para los niños. Mantenga el interruptor de seguridad en la Después de cerrado (LOCK) cuando no este en uso.
- **Siga todas las precauciones y direcciones en la etiqueta del limpiador 30 seconds para exteriores.**
- **Nunca coloque la boquilla en su boca.**
- **No Después a través de personas y mascotas.**
- **no Después a través de tomacorrientes o componentes eléctricos.**