

Bird•B•Gone®

Polycarbonate Bird Spikes

**As Tough as Steel
at Half the Cost!**

The Original Plastic Bird Spike!



Bird-B-Gone Polycarbonate Bird Spikes are a physical bird deterrent used to prevent birds from landing on flat or curved surfaces. The uneven surface humanely blocks birds from unwanted areas.

- ▶ Lowest Cost Plastic Bird Spike!
- ▶ Patented Design!
- ▶ Five Year Guarantee!



Made by Bird-B-Gone in the USA!

Advantages & Benefits

- Most affordable long term method of bird control!
- Humane, does not harm birds!
- Patented! Rigid one piece construction!
- Low profile - virtually invisible!
- Completely flexible, conforms to any surface!
- U.V. protected / Sun & weather proof / Not affected by extreme temperatures!
- Comes in three widths: 3", 5" & 7" and 7 colors!
- Easy to install. Can be glued, screwed or tied down!
- Manufactured by Bird-B-Gone in the USA!



Polycarbonate Bird Spikes are virtually invisible!



Ideal for rooftops, eaves, ledges and other areas!

PATENTED US 7243465 / US 7596910




BIRD•B•GONE® Inc.

Professional Bird Control Products Since 1992

1 (800) 392-6915
www.birdbgone.com
nobirds@birdbgone.com

Bird•B•Gone® Polycarbonate Bird Spikes

Available in 3 widths:

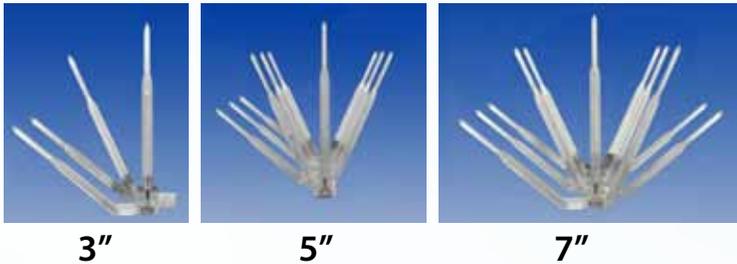

3"


5"

7"


Bird-B-Gone Polycarbonate Bird Spikes come pre-assembled in 2 foot sections for fast and easy installation. Spikes are ideal for keeping birds off:

- ▶ Rooflines
- ▶ Parapet Walls
- ▶ Ledges
- ▶ Signs
- ▶ Window Sills & Other Areas!

Choose from 7 Colors:

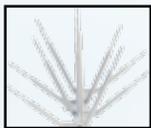


Grey

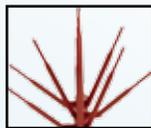

Brick Red



Tan

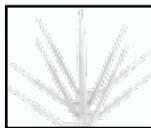


White



Black



Brown

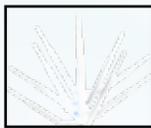

Clear



Adhesive Available



Polycarbonate Bird Spikes installed on a parapet wall

Since 1992... The Lowest Cost,
Longest Lasting Plastic Bird Spike!

Call our Bird Control Engineers at
1-800-392-6915 for installation advice
and recommendations!




PATENTED US 7243465 / US 7596910

Underside View

GLUE TROUGH
FOR EASY GLUING

OFFSET PRE DRILLED HOLES
FOR SCREW ATTACHMENT

SNAP OFF NOTCHES..
BREAK OFF FOR
SMALLER SECTIONS

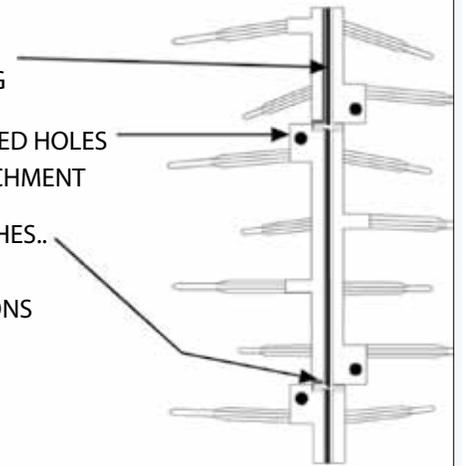

To Install: Surface should be clean and dry before installation. Select width of bird spike based on the surface to be covered leaving no more than 1" on either side for birds to land. Glue, screw or tie down to the surface.



Glue troughs along the base make for easy installation. Bird-B-Gone offers construction grade adhesives.



BIRD•B•GONE® Inc.

Professional Bird Control Products Since 1992



1 (800) 392-6915
www.birdbgone.com
nobirds@birdbgone.com